



Headquarters: 2145 Indian Road • West Palm Beach, Florida 33409 • Phone (888) or (561) 616-9003 • Fax (561) 616-9005  
West Coast Branch: 6481 Orangethorpe Ave, Ste. 7 • Buena Park, CA 90620 • Phone (714) 739-5200 • Fax (714) 739-5300


## Instructions - Altrex Hinge Section




1. Hinge Section Parts.



2. Slide steel frames onto deck section.

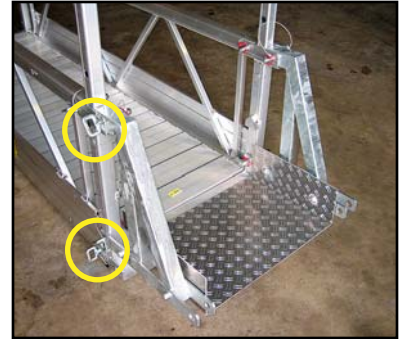

3. Mount assembled section onto U-frame with Quickpins.

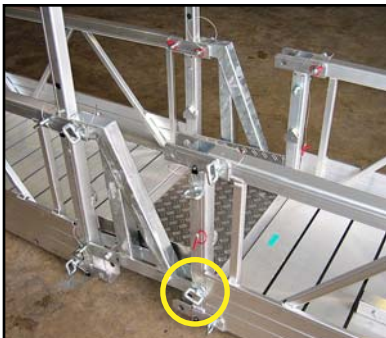

4. Connect hinge section to the U-frame vertical tube of the connecting platform.



5. Slide hinge section guardrail over platform guardrail.



5. Finished guardrail installation.

Install Walk Thru Type Stirrup on this side of Hinge Section

